2.Exploded Views and Parts List

2-1 Cassette Deck :ADR246AMW(OPTION)

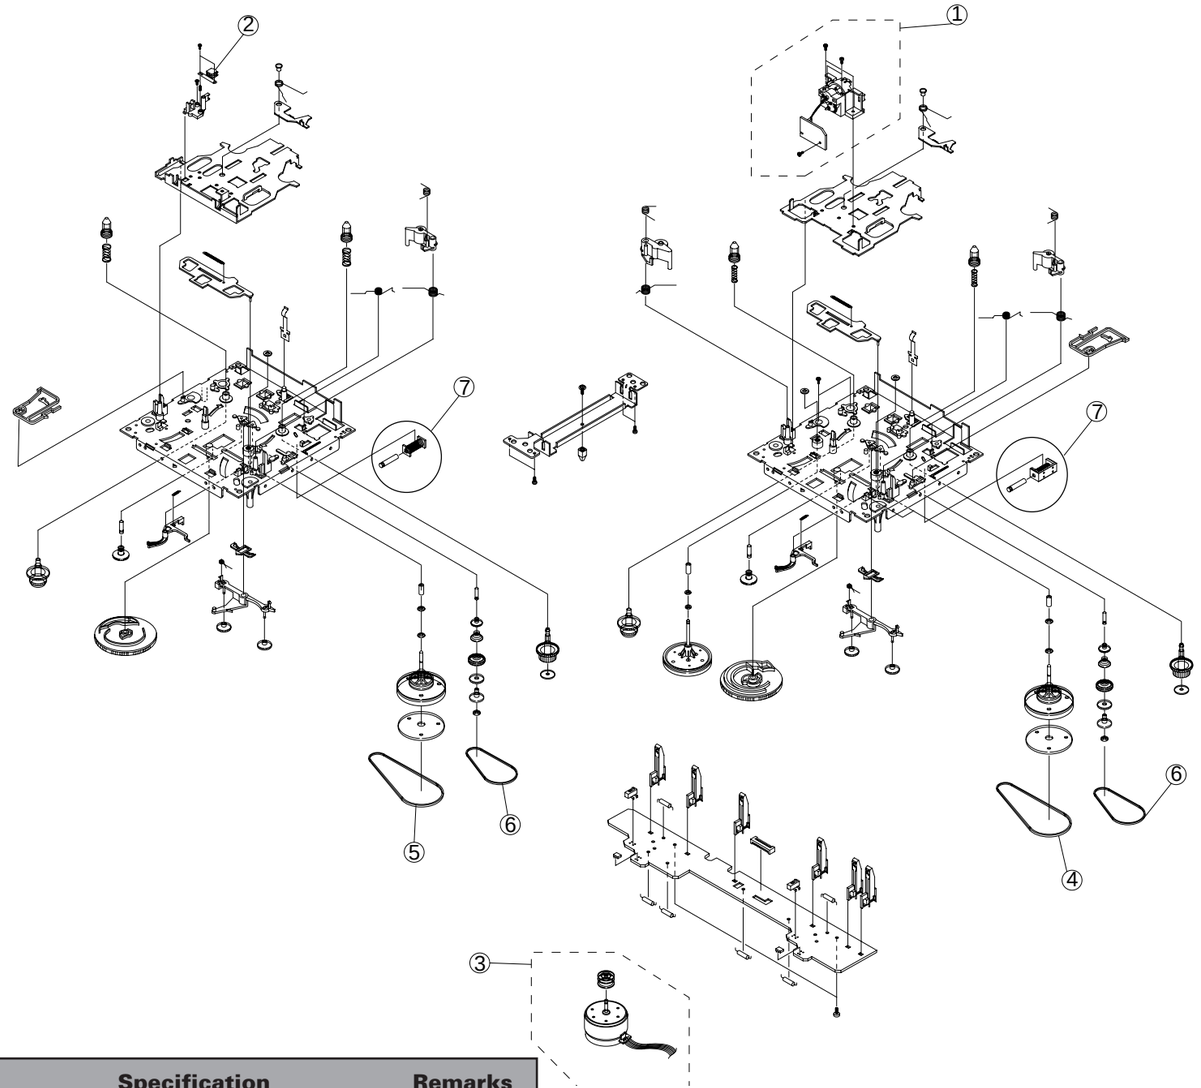

No.	Code No.	Description	Specification	Remarks
	AH59-00075A	DECK-CASSETTE	ADR246AMW	
1	AH81-00368A	ASS.Y RP HEAD	ADR2400-RP(SANKYO)	MT91-11010T
2	AH81-00141A	HEAD PB	TC881CB	MT59-00044A
3	AH81-00363A	ASS,Y MOTOR	ADR2400-SHU2L	MT91-15012J
4	AH81-00364A	BELT MAIN1	ADR2400-MAIN 0.5	6602-001056
5	AH81-00365A	BELT MAIN2	ADR2400-MAIN 1.3	6602-001057
6	AH81-00101A	BELT SUB	ADR2400-FR	6602-001055
7	AH81-00102A	SOLENOID	ADR2400-1	MT75-00049A

2-2 Total Exploded View and Parts List

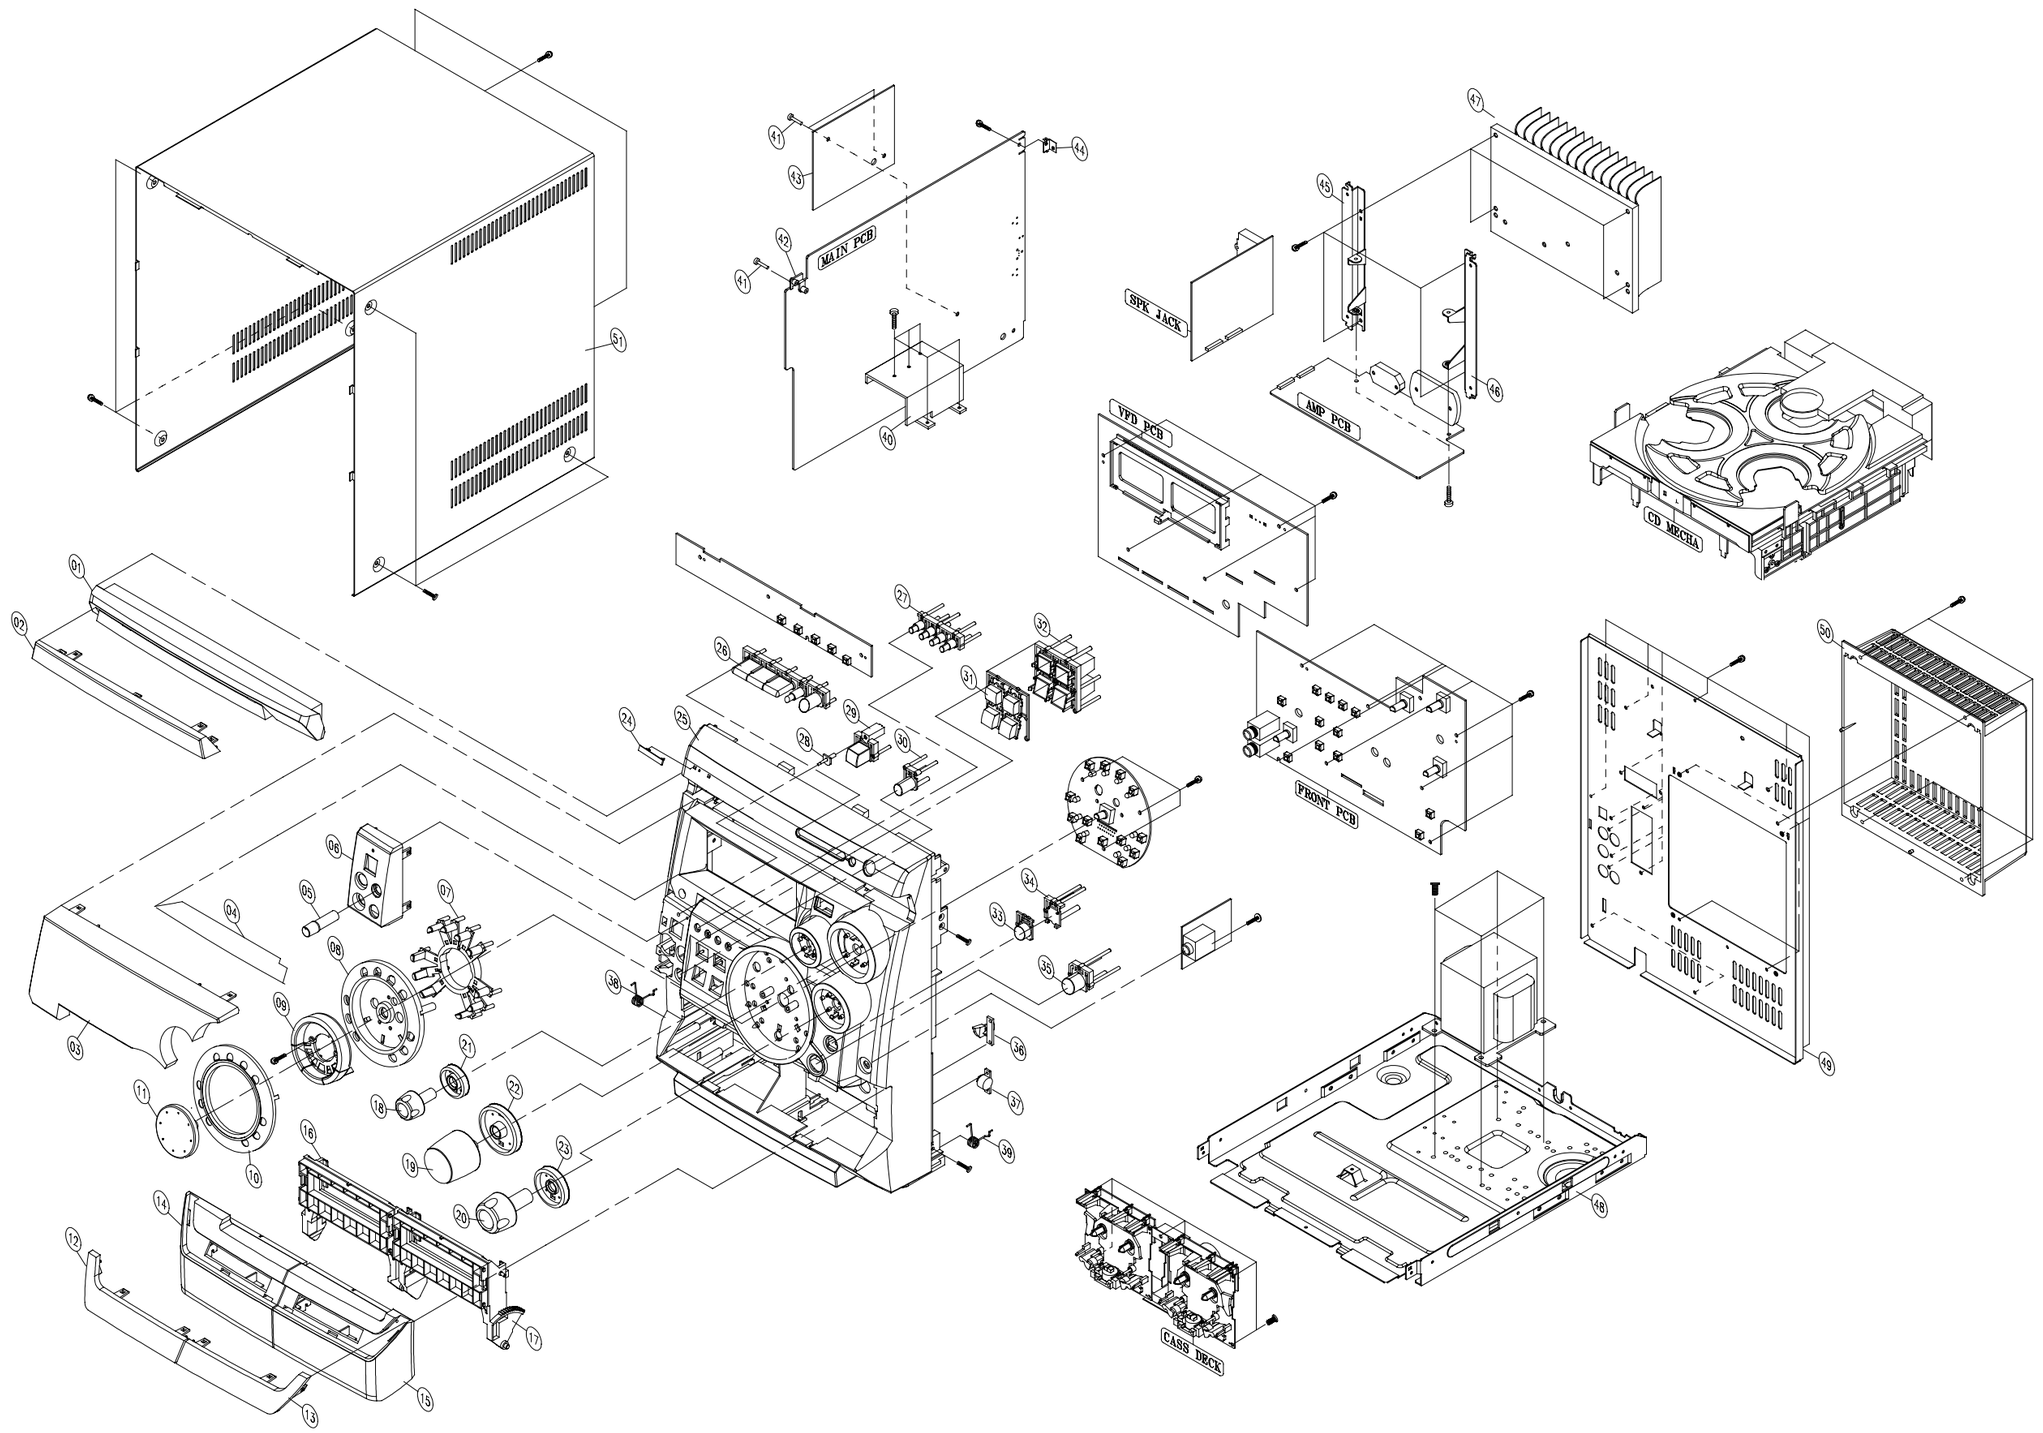

* Parts List of Total Exploded view

No.	Code No.	Description	Specification	Q'ty	REMARK
1	AH64-01704B	DOOR-CD	ABS L/GRAY	1	
2	AH64-01704B	WINDOW-DOORCD	PMMA BROWN	1	WB650
	AH64-01704C	WINDOW-DOORCD	PMMA BROWN	1	ZB630
	AH64-01704D	WINDOW-DOORCD	PMMA BROWN	1	WB630
3	AH64-01705B	WINDOW-VFD	PMMA BROWN	1	BASIC
	AH64-01705C	WINDOW-VFD	PMMA BROWN	1	ZB630
4	AH63-00395A	SHEET-VFD	PC 0.4T	1	
5	AH64- 01715B	KNOB-MIC	ABS L/GRAY	1	OPTION
6	AH64-00964B	CAP-MIC.D	ABS L/GRAY	1	MIC, NO RDS
	AH64-00963B	CAPMIC.E	ABS L/GRAY	1	NO MIC,NO RDS
	AH64-00963C	CAPMIC.E	ABS L/GRAY	1	NO MIC, RDS
7	AH64-01713B	KNOB-CONTRL	ABS CLEAR	1	
8	AH61-00965A	COVER-CONTROL	ABS BLK	1	
9	AH64-01718B	KNOB-STOP	ABS BLUE	1	BASIC
	AH64-01718C	KNOB-STOP	ABS BLUE	1	ZB630
10	AH61-00980B	CAP-CONTROL	AL 0.8T	1	BASIC
	AH61-00980C	CAP-CONTROL	AL 0.8T	1	ZB630
11	AH64-01710B	KNOB-JOG	ABS L/GRAY	1	
12	AH64-01706A	WINDOW-DOOR.A	PMMA BROWN	1	
13	AH64-01707A	WINDOW-DOOR.B	PMMA BROWN	1	
14	AH64-01701B	DOOR-CASS.A	ABS L/GRAY	1	FULL LOGIC
	AH64-01701C	DOOR-CASS.A	ABS L/GRAY	1	AUTO REVERSE : OPTION
15	AH64-01702B	DOOR-CASS.B	ABS L/GRAY	1	AUTO REVERSE
16	AH61-01011A	HOLDER-DOOR.A	ABS L/GRAY	1	
17	AH61-01012A	HOLDER-DOOR.A	ABS L/GRAY	1	
18	AH64-01716B	KNOB-SOUND	ABS L/GRAY	1	
19	AH64-01711B	KNOB-VOLUME	ABS L/GRAY	1	
20	AH64-01717B	KNOB-SUBWOOFER	ABS L/GRAY	1	
21	AH64-00157A	LENS-SOUND	PMMA BLUE	1	
22	AH67-00156A	LENS-VOLUME	PMMA BLUE	1	
23	AH67-00160A	LENS-SUBWOOFER	PMMA BLUE	1	
24	AH64-70003K	BADGE-BRAND	ABS BLK	1	SILVER
25	AH64-01700B	CABINET-FRONT	ABS L/GRAY	1	NO RDS
	AH64-01700C	CABINET-FRONT	ABS L/GRAY	1	RDS
	AH64-01700D	CABINET-FRONT	ABS L/GRAY	1	LATIN AMERICA
26	AH64-01709B	KNOB-OPEN	ABS L/GRAY	1	
27	AH64-01714B	KNOB-DEMO	ABS L/GRAY	1	
28	AH67-00159A	LENS-STANDBY	PMMA MILKY	1	
29	AH64-01708B	KNOB-POWER	ABS L/GRAY	1	
30	AH64-01719B	KNOB-ECHO	ABS L/GRAY	1	OPTION
31	AH67-00154B	LENS-FUNCTION	PMMA BLUE	1	BASIC
32	AH61-00967A	HOLDER-FUNCTION	ABS WHITE	1	
33	AH67-00155A	LENS-P.SOUND	PMMA CLEAR	1	
34	AH61-00970A	HOLDER-P.SOUND	ABS BLK	1	
35	AH64-01712B	KNOB-ENTER	ABS L/GRAY	1	
36	AH95-50001A	LATCH ASSY	POM	2	
37	AH61-80030A	DAMPER	POM	2	
38	AH61-00522A	SPRING-EJECT,A	STS	1	
39	AH61-00523A	SPRING-EJECT,B	STS	1	
40	AH62-00044A	HEAT-SINK IC	AL	1	
41	AH61-00414A	SUPPORT-RIVET	POM	3	
42	AH61-00021A	SUPPORT-PCB	ABS BLK	1	
43	AH63-00278A	COVER-PCB	EVA	1	
44	AH61-00685A	BRACKET-PCB	SECC0.8T	1	
45	AH61-00973A	BRKT-H/SINK.L	SECC1.0T	1	
46	AH61-00977A	BRKT-H/SINK.R	SECC1.0T	1	
47	AH62-00063A	HEAT-SINK.M	AL	1	WB650
	AH62-00063D	HEAT-SINK.M	AL	1	WB/ZB630
48	AH64-03416E	CABINET-BOTTOM	SECC 1.0T	1	
49	AH64-01703B	CABINET-REAR	SECC 0.8T	1	1 VOL
	AH64-01703C	CABINET-REAR	SECC 0.8T	1	2 VOL
	AH64-01703D	CABINET-REAR	SECC 0.8T	1	1VOL+DIGITAL OUT
	AH64-01703E	CABINET-REAR	SECC 0.8T	1	1VOL+SW
	AH64-01703F	CABINET-REAR	SECC 0.8T	1	2VOL+SW
50	AH61-01036A	COVER-REAR	ABS L/GRAY	1	
51	AH64-00616A	CABINET-TOP	SECC 0.8T	1	

2-3 CD Deck Exploded View and Parts list

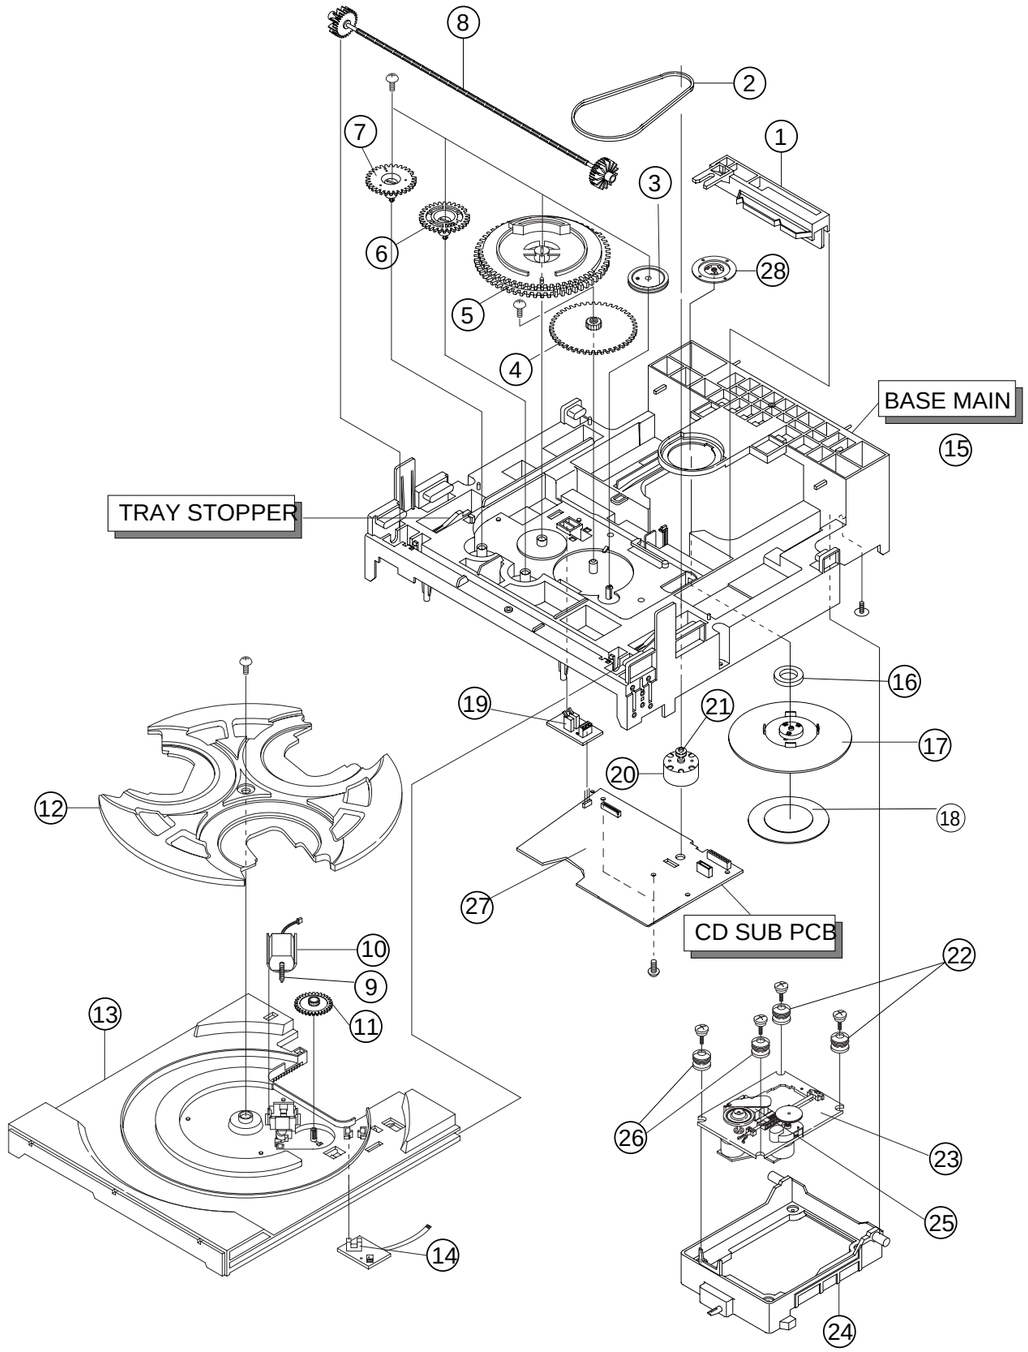

No.	Code No.	Description	Specification	Remarks
	AH97-00857A	ASS'Y-DECK	G3HI-3CD/VCD	
1	AH66-80022A	SLIDER-CAM	ABS HF-380 NTR	
2	AH66-60034A	BELT-LOAD	CR	
3	AH66-20186A	GEAR-PULLEY	POM (M90-44) WHT	
4	AH66-20187A	GEAR-LOAD	POM (M90-44) BLK	
5	AH66-20188B	GEAR-CAM	POM (M90-44) WHT	
6	AH66-20189B	GEAR-TRAY	POM (M90-44) BLK	
7	AH66-20190B	GEAR-CONVERT	POM (M90-44) WHT	
8	AH66-20191A	GEAR-SYNCRO	ABS HF-380 NTR	
9	AH66-20192A	GEAR-WORM	POM(M90-44),M0.5,PCD4.5	
10	AH31-12001A	MOTOR-LOADING	FF-030PN-09120	
11	AH66-20193A	GEAR-ROULLETE	POM(M90-44) BLK	
12	AH63-00324A	TRAY-ROULLETE	ABS XR-401 BLK	
13	AH63-00325A	TRAY-DISC	ABS BLK	
14	AH32-10001F	SENSOR	KPI-L06	
15	AH61-00837A	BASE-MAIN	ABS,NATURAL,CMS-300	
16	3302-000159	MAGNET	AC,3500-3800G,2.6-3.2MGOe,30	
17	AH63-90053A	TABLE-CHUCK	,ABS,+GF20%,BLK,	
18	AH63-00068B	SHEET-CHUCK	SHEET,HYMERON,BLK,0.4T	
19	3405-000101	SWITCH -MICRO	MLS-24	
20	AH31-10021A	MOTOR-DC	RF-500TB,9VDC/130MA	
21	AH66-10008A	PULLEY-MOTOR	POM,BLK,CMS-CR3	
22	AH73-10031A	RUBBER-CD(R)	SI,CMS-300,40,RED	
23	AH91-60150C	CDP DECK ASSY	CMS-D73SG6U	
24	AH66-30098A	LEVER-LIFTER	ABS BLK CMS-300	
25	AH30-00007A	PICK-UP	SOH-AD3	
26	AH73-10034A	RUBBER-CD(G)	SI,CMS-300,40,GREEN	
27	AH92-00922A	ASS'Y PCB CD MAIN		
28	AH61-00225A	BRKT-CHUCK	SECL 0.8t	

2-4 SPEAKER Exploded View and Parts list

2-4-1 : MAXWB630/MAXZB630

* CAUSION : It is used the bonding, connet NET FRAME(or FRONT PANEL ASS'Y) to CABINET ASS'Y.
So when the disassembly, take extreme care not to demage the SPEAKER.

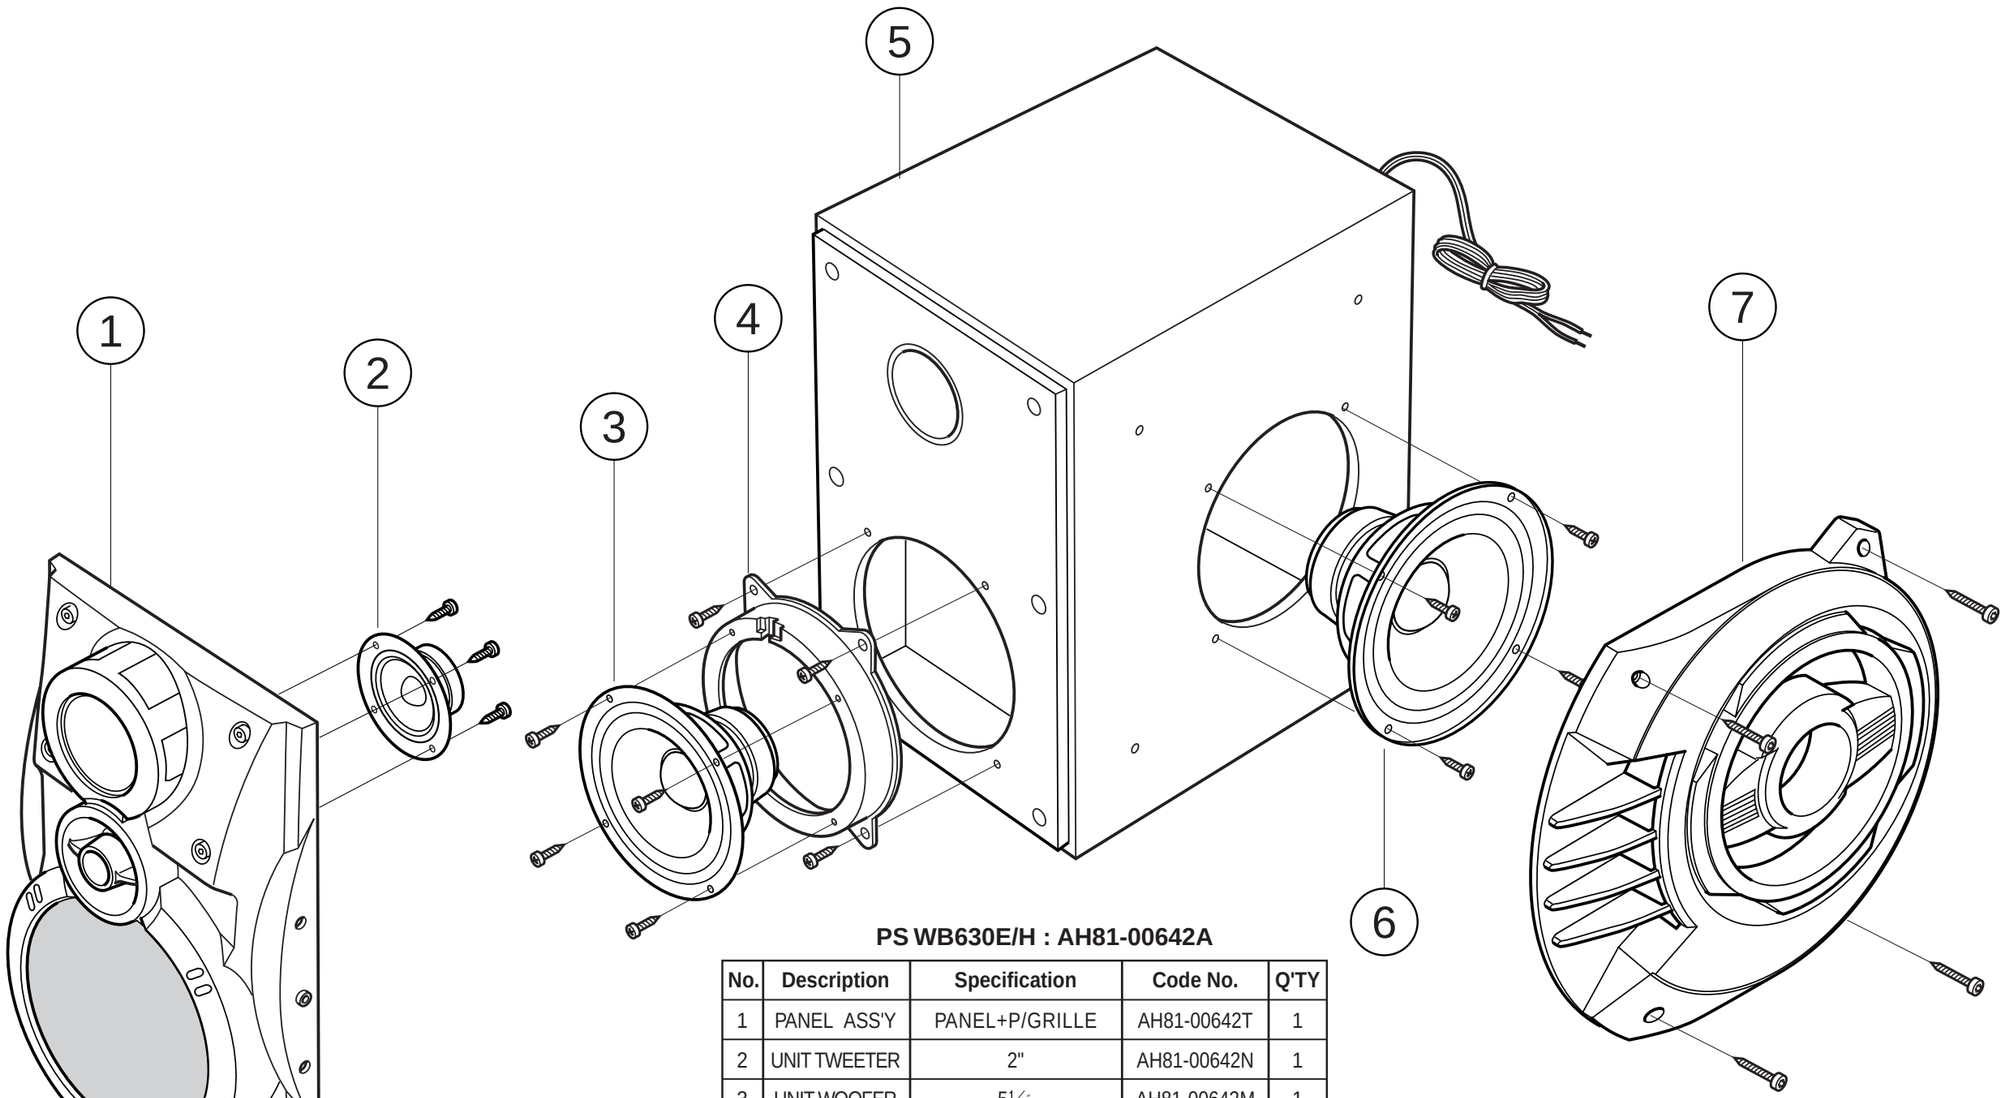

PS WB630E/H : AH81-00642A

No.	Description	Specification	Code No.	Q'TY
1	PANEL ASS'Y	PANEL+P/GRILLE	AH81-00642T	1
2	UNIT TWEETER	2"	AH81-00642N	1
3	UNIT WOOFER	5¼"	AH81-00642M	1
4	WOOFER RING	HIPS BLK	AH81-00642G	1
5	CABINET ASS'Y	PB 9t / 12t	AH81-00642J	1
6	UNIT SUBWOOFER	6½"	AH81-00642L	1
7	SIDE-PANEL	HIPS WHITE	AH81-00642E	1

2-4-2 : MAXWB650

* CAUSION : It is used the bonding, connet NET FRAME(or FRONT PANEL ASS'Y) to CABINET ASS'Y.
So when the disassembly, take extreme care not to demage the SPEAKER.

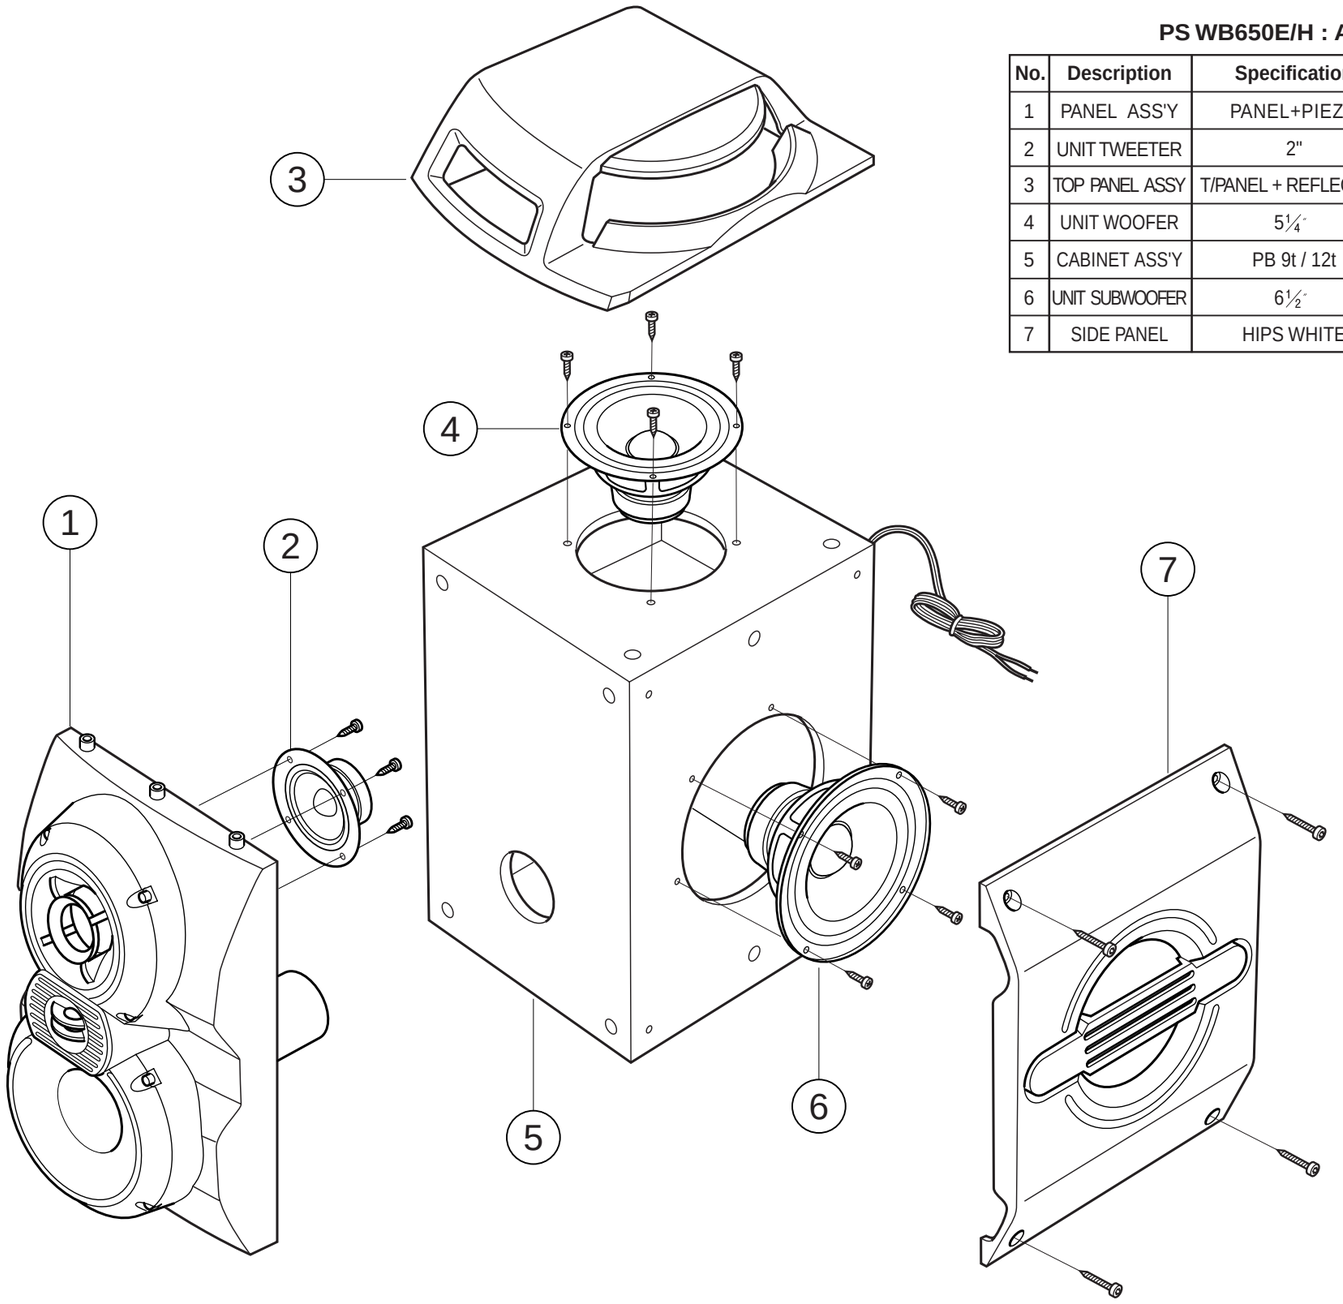

PS WB650E/H : AH81-00643A

No.	Description	Specification	Code No.	Q'TY
1	PANEL ASS'Y	PANEL+PIEZO	AH81-00643P	1
2	UNIT TWEETER	2"	AH81-00643L	1
3	TOP PANEL ASSY	T/PANEL + REFLECTOR	AH81-00643Q	1
4	UNIT WOOFER	5¼"	AH81-00643K	1
5	CABINET ASS'Y	PB 9t / 12t	AH81-00643R	1
6	UNIT SUBWOOFER	6½"	AH81-00643J	1
7	SIDE PANEL	HIPS WHITE	AH81-00643H	1